

# Car Service Guide

**Oil Change & Tire Rotation:** at every **5,000 KM** or **6 Months**  
**Spring / Fall Maintenance**

**Brakes:** at every **50,000 KM** or **3 Years**

**Brake Fluid:** at every **50,000 KM** or **5 Years**

**Transmission Oil:** at every **50,000 KM** or **5 Years**

**Power Steering Fluid:** at every **50,000 KM** or **5 Years**

**Engine Coolant:** at every **100,000 KM** or **10 Years**

Nowadays **Vehicle** is necessity, although all of them are **computerised** now but still we must know few **basic tips** for **Regular Maintenance**.

**You MUST Rust Proof your vehicle every 5-10 years in snowy region.**

**No Compromise on Safety - Engine, Brakes, Wheels, Lights etc.,  
check with Very Good Auto Mechanics for Safety if not Dealers.**

**You must check Car Owner's Manual to verify**